



TONYO™ RECEPTACLE

30-GALLON CAST-IN-PLACE INSTALLATION INSTRUCTIONS


MATERIALS INCLUDED



TOOLS NEEDED

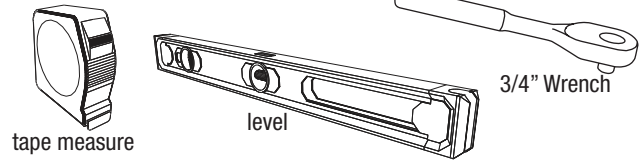


STEP BY STEP FOR ALL 30-GALLON CAST-IN-PLACE TONYO RECEPTACLES

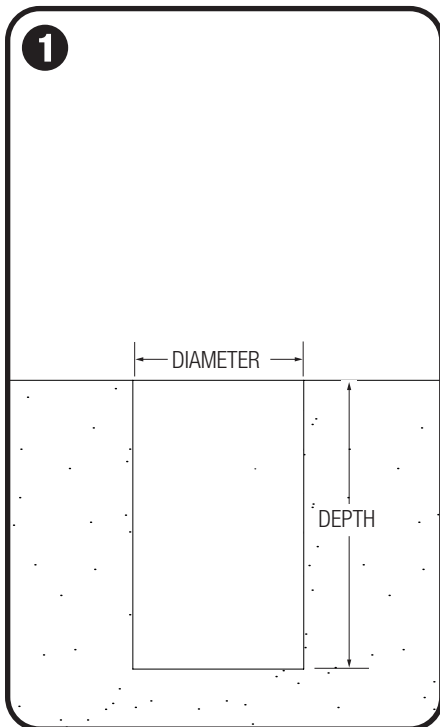


Create space for footer

- A sufficient footer size depends on frost and other conditions to be determined by the installer. A minimum of an 18" x 18" wide x 30" deep footer is recommended.

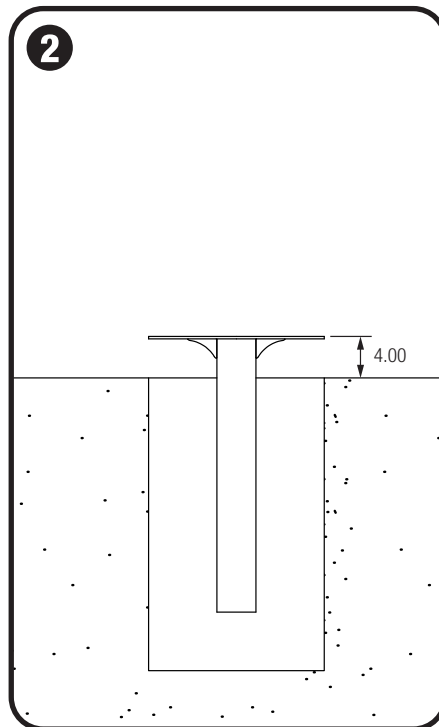

Position and support mount assembly

- Position mount assembly in desired final location and support so concrete can be poured in hole around pole.
- The bottom of the mount assembly plate should be 4" above the ground (top of the plate 4.25" above the ground).

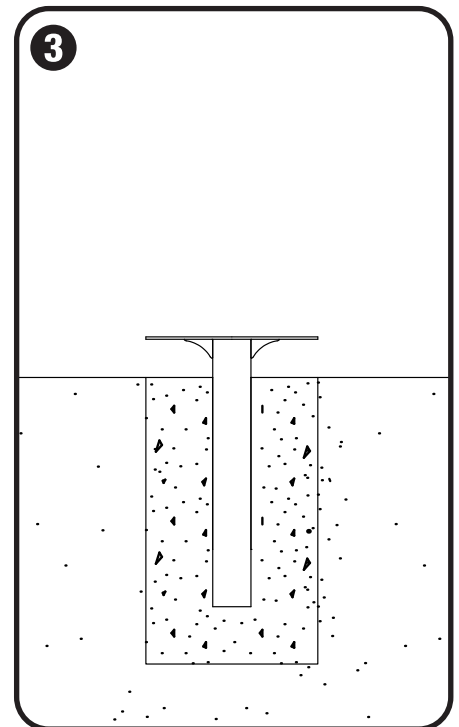


Pour concrete footer

- Mix concrete and pour footer according to concrete manufacturer's instructions.
- As soon as footer is poured, verify levelness.
- Allow concrete to cure completely according to concrete manufacturer's instructions before removing any temporary supports or installing fixture.

TONYO™ RECEPTACLE


30-GALLON CAST-IN-PLACE INSTALLATION INSTRUCTIONS

STEP BY STEP FOR ALL 30-GALLON CAST-IN-PLACE TONYO RECEPTACLES

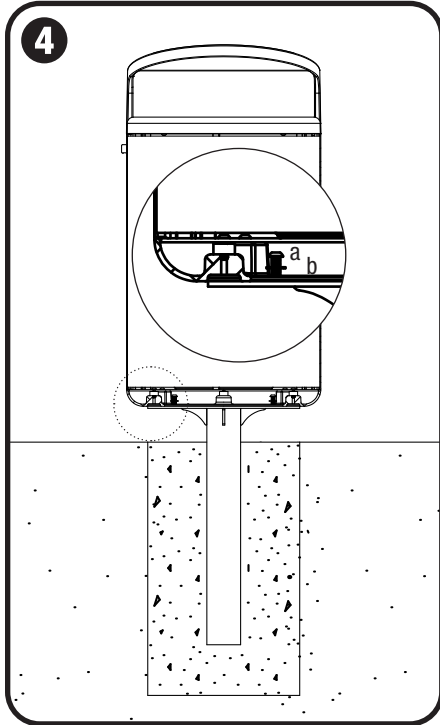

Position receptacle on mount assembly

- Slide 3/8" stainless steel flat washer (a) onto each 3/8"-16 x 1" button head cap screw (b) and slide through the holes in the base of the receptacle.
- Place receptacle on mount assembly. Line up the four screws with the holes in the mount assembly.

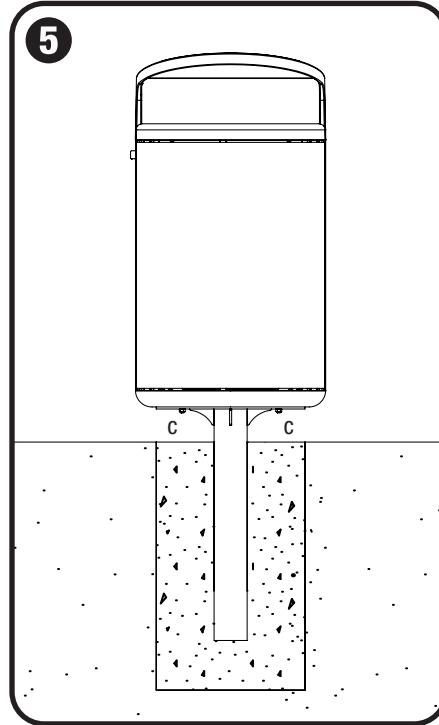

Attach receptacle to mount assembly

- Fasten 3/8"-16 stainless steel locknut (c) onto ends of screws. Tighten until snug.